

SPECIAL OPERATOR INSTRUCTIONS FOR RICHARDSON VIEWER

1. Make sure the back of the machine is at least 1 foot out from the wall, to permit air to circulate around and into the air intake.
2. Turn the machine on at the beginning of the working period and leave on for the full period. If the machine is not in use, lower light intensity to the lowest visible level. When the machine is initially turned on bring the light intensity level up slowly in discreet steps.
3. Until a service change has been installed, pull the top platen out approximately 1/16th inch from the fully inserted position.
4. In order to lengthen the bulb life, when possible, reduce the ambient background lighting and view the film at lower than maximum intensity.

SPECIAL OPERATOR INSTRUCTIONS FOR RICHARDSON VIEWER

1. Make sure the back of the machine is at least 1 foot out from the wall, to permit air to circulate around and into the air intake.
2. Turn the machine on at the beginning of the working period and leave on for the full period. If the machine is not in use, lower light intensity to the lowest visible level. When the machine is initially turned on bring the light intensity level up slowly in discreet steps.
3. Until a service change has been installed, pull the top platen out approximately 1/16th inch from the fully inserted position.
4. In order to lengthen the bulb life, when possible, reduce the ambient background lighting and view the film at lower than maximum intensity.