


CONFIDENTIAL

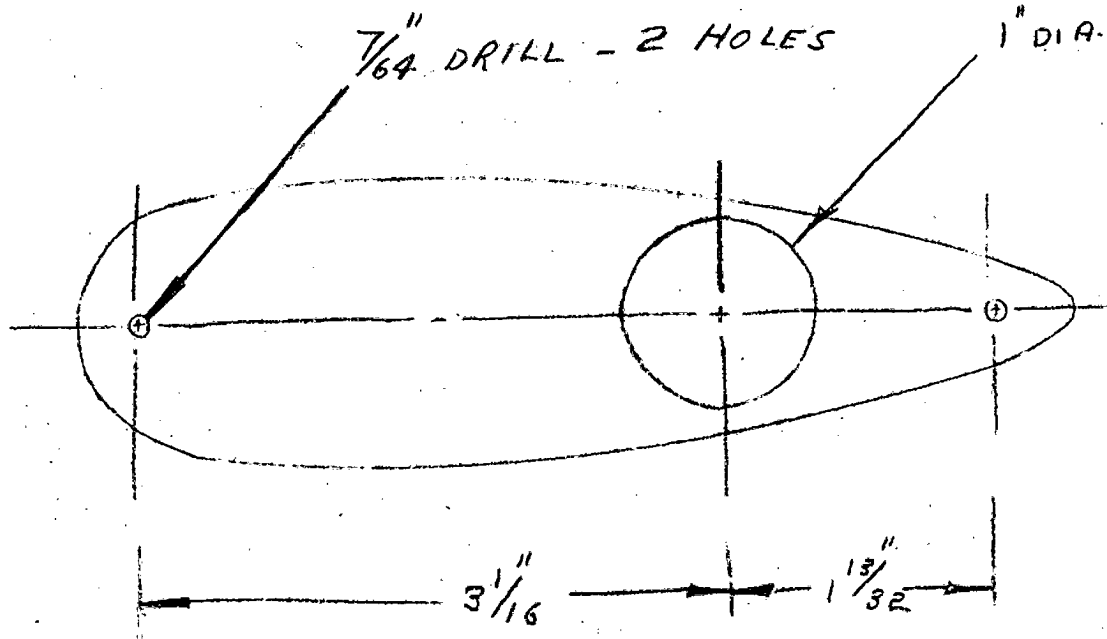

Installation Instructions for [redacted] Model 50037 "Mirror Antenna"


25X1

1. Locate antenna on cowl or fender.
2. Center punch and drill two #33 or 7/64" holes, referring to mounting detail above.
3. Place antenna in position over drilled holes. Fasten securely with screws provided.
4. Fasten cable to input connector of antenna.
5. Thoroughly waterproof connectors using suitable tapes and sealants.

DOCUMENT NO. _____
 NO CHANGE IN CLASS.
 DECLASSIFIED
 CLASS. CHANGED TO: TS S ^(C) 2010
 NEXT REVIEW DATE: _____
 AUTH: HR 70-2
 DATE: 2 DEC 1960 REVIEWER: 064540

25X1

*1 copy of this sheet
 given to*

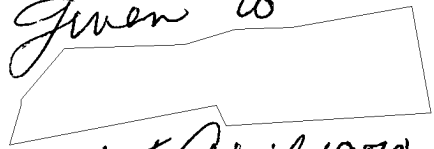

14 April 1970





MOUNT DETAIL MODEL 25X1
 50037 MIRROR ANTENNA

CONFIDENTIAL


ORIGINAL CL BY 235979
 DECL REVW ON 2010
 EXT BY ND 6 YRS BY SAME
 REASON 3 d (3)

DATE NOV 17/64	SCALE	25X1
DRAWING NO.	A-A-008	

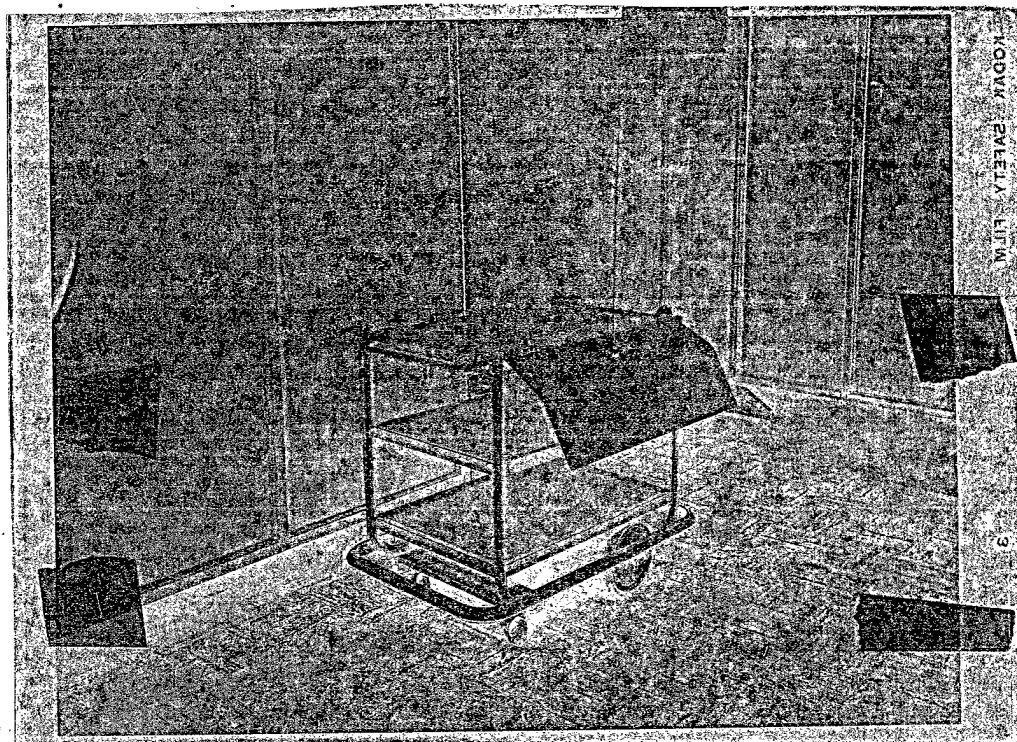


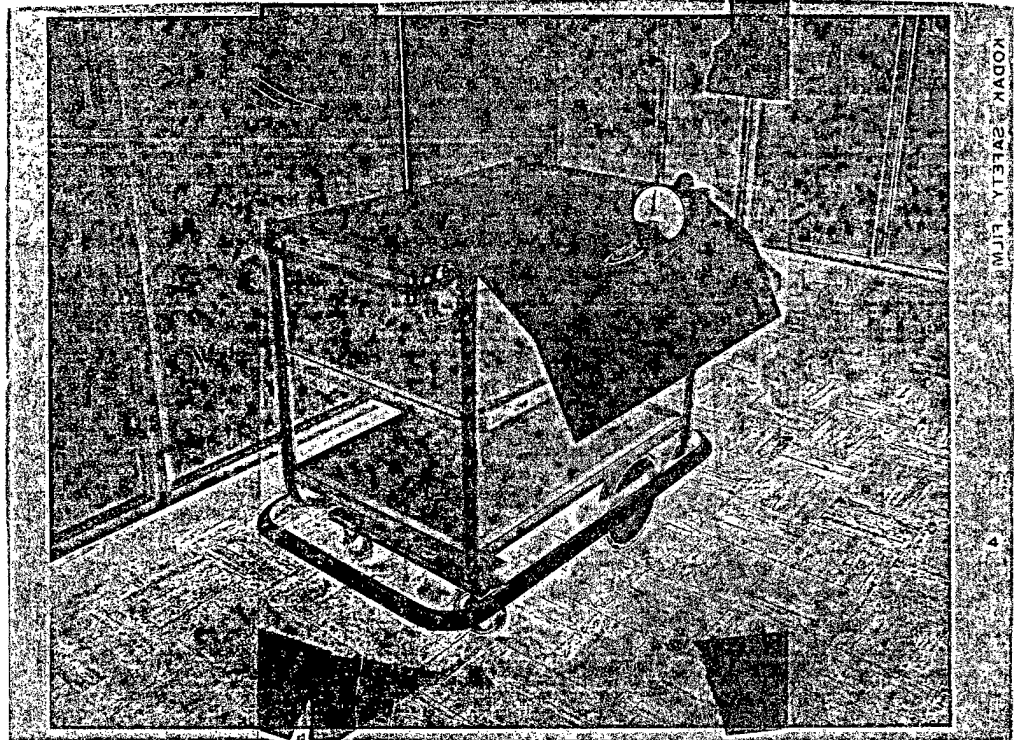



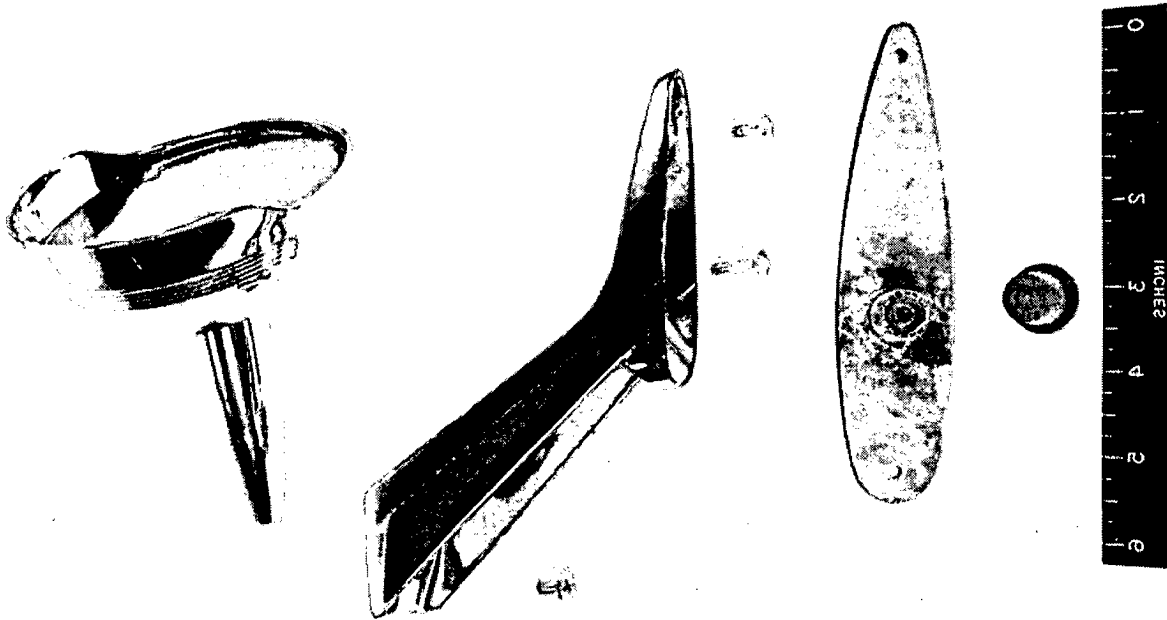


Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0

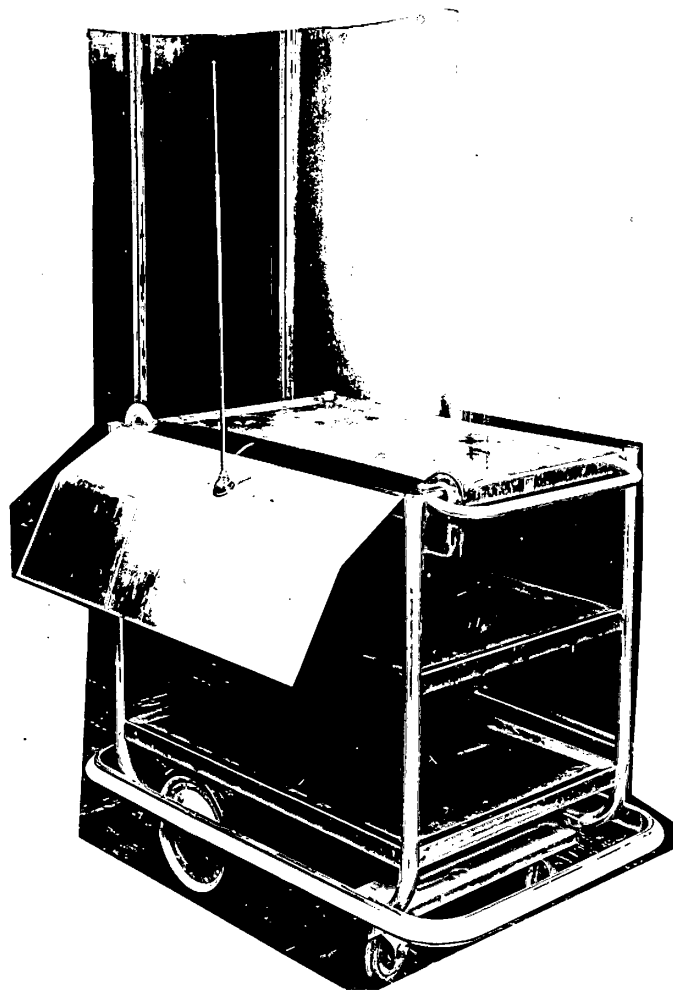


Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0

Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0

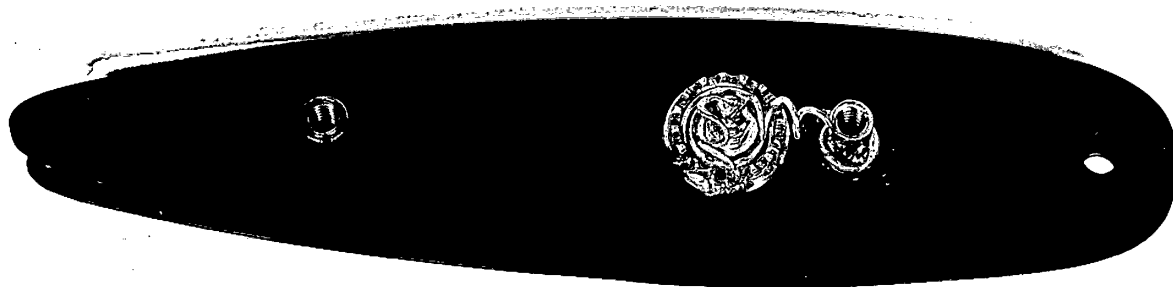

Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0

Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0

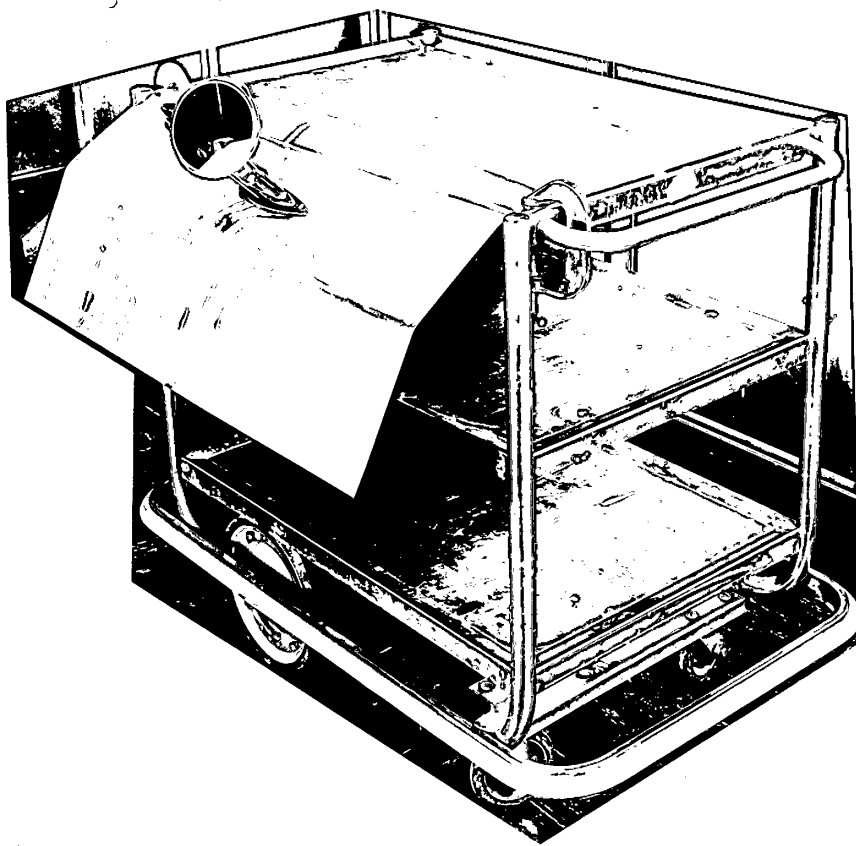

Declassified in Part - Sanitized Copy Approved for Release 2012/09/13 : CIA-RDP78-03535A000500030002-0